

Daily Maintenance

- Monitor your battery system for max performance from your battery pack
- Switch off the machine when not in use
- Clean surface area's for smooth constant processing

Weekly Maintenance

- Drain water from the tank
- Check water filter and oil lubricator
- Tolerance on mounting head check
- Tighten bolts and nuts if required
- Inspect wear & tear parts like (de)mount head and rollers

Monthly Maintenance

- Lubricate the horizontal and vertical spindles with a grease brush
- Thorough cleaning surface

General Maintenance

- Replace/renew all wear and tear parts like mounting head, bead press roller, tire lever protection and turntable boot when necessary.