

SOFT START & TURTLE MODE



This button adjusts the rotation speed of the turntable according to the mechanic's preferences. When the button is pushed inwards, the 'slow start' function remains constant. When the button is released, the machine starts with general slow start and continues to normal speed.